



# ROCKPAVE OVERLAY ASPHALT/TIMBER FLOORS

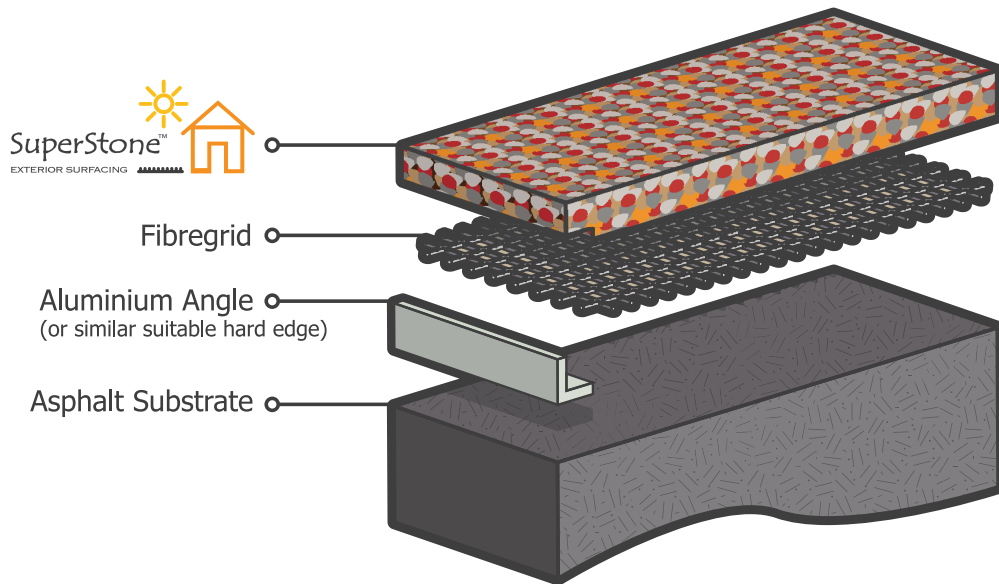

**Note:**

Overlay may require a key in channel to remain flush with adjacent pavements. See Specification Advice for “Key in Channels” for details.

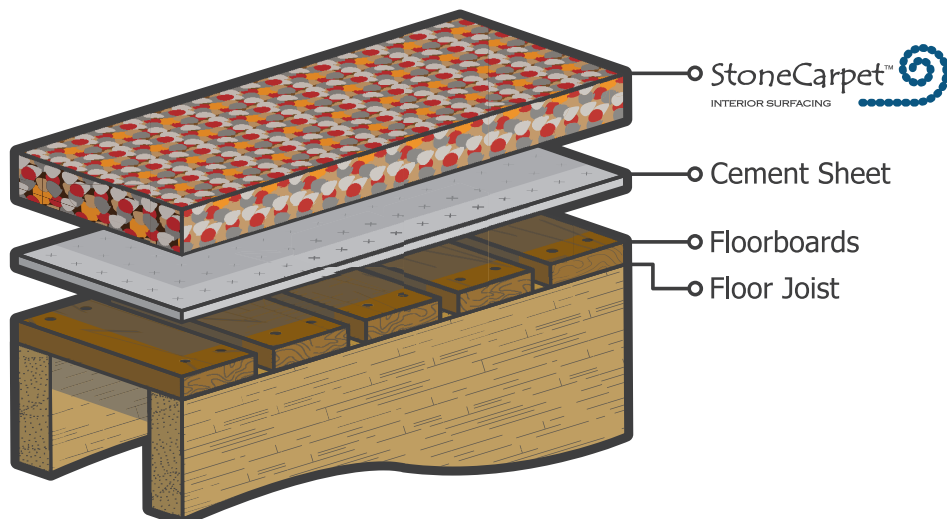

**Note:**

All cement sheet overlays will require priming with Rockseal primer before applying Rockpave Systems. A suitable waterproofing membrane should also be applied where an impermeable surface is required.